



SOUTHERNPINE OCHRE

TREATED PINE - REDEFINED


INSTALLATION GUIDE FOR SOUTHERNPINE OCHRE DECKING

A 'MUST READ GUIDE' BEFORE FITTING YOUR DECKING BOARDS

PINE DECKING IS BEST SUITED TO COVERED/SHELTERED DECK APPLICATIONS.

SouthernPine OCHRE is pre-stained and pre-oiled with QCOAT Outdoor Timber Oil. This factory applied 4 sided single coat is designed to provide initial protection from weathering and to save time on installation. Final top coats of QCOAT oil after installation are required to seal and protect your finished deck.

1 SEAL TRIMMED ENDS

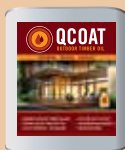

Apply QCOAT oil to all trimmed/cut ends for full protection.

(refer to FAQs on the back)

2 FIX BOARDS TO JOISTS



- Pre-drill holes
- Use stainless steel screws
- Stagger joins across multiple joists

3 CLEAN THE DECK



Use a soft bristled broom



DO NOT POWER WASH

4 APPLY TOP COAT OF OIL



5 ALLOW TO DRY



48 HOURS



7 DAYS

Tru-Core® WBA
H3 Treated



Australian
Made

6 RECOAT EVERY 6 -12 MONTHS



Non
Arsenic



Termite
Resistant

All residential decks must meet the relevant building standards applicable. Baywood decking is to be installed in applications meeting the requirements of the following Data Sheets and Standards:

- Queensland Timber – Residential Timber Decks Technical Data Sheet
- Australian Standard 1684: Residential Timber – Framed Construction
- AS1720: Timber Structures – Design Methods

For further information,
please contact Baywood on
(07) 4123 3455 or visit www.baywood.com.au



BAYWOOD



SOUTHERNPINE

TREATED PINE - REDEFINED

OCHRE

FREQUENTLY ASKED QUESTIONS

WHY USE SOUTHERNPINE OCHRE?

SouthernPine OCHRE is pre-stained and pre-oiled with QCOAT Outdoor Timber Oil. This factory applied 4 sided single coat is designed to provide initial protection from weathering and to save time on installation. It is great value for money, easy to install and offers the charming look and feel of natural timber that just can't be replaced. Unlike plastic and steel, timber is the world's most environmentally-friendly building product. It is natural, reusable, recyclable and sustainable.

IS SOUTHERNPINE OCHRE TREATED?

SouthernPine OCHRE is treated with an eco-friendly water based preservative treatment. It is used to protect above-ground timber from fungal decay and termites. Unlike traditional wood treatments, WBA does not contain heavy metals or solvents, and is APVMA approved. By choosing WBA treated pine, you can enjoy the benefits of a safe, natural appearance that will stand the test of time.

WHAT IS QCOAT?

QCOAT is an Australian made penetrating timber oil formulated to protect outdoor timber from the effects of weathering by repelling moisture and improving dimensional stability. QCOAT is specially designed for use with outdoor timber projects including decks, boardwalks, jetties, bollards, fences and park furniture. Not only is it easy to apply and recoat, QCOAT brings out the warmth and beauty of real natural timber.

DO I HAVE TO USE QCOAT?

We highly recommend using QCOAT for the final coats following installation to ensure consistency, although you can still apply an alternative decking oil after installation if you prefer. To do this, wash down the deck using an oxalic acid based deck wash (follow manufacturers guidelines) and allow 24hrs to dry before applying your chosen decking oil. A minimum of 2 coats is highly recommended.



BAYWOOD